FUNCTION

OIL DIFFUSER USER MANUAL

PRECAUTIONS/WARNINGS

• Do not fill overfill (>300ml)


- Avoid switching on power when the tank is empty.
- Do not touch the ultrasonic vibration plate.
- Do not fill water directly, please add water with the included measuring cup.
- For best results, keep away from direct sunshine, heat sources, air conditioners, or fans.
- Keep on flat, moisture-resistant surfaces. Do not place on carpet or unstable surfaces.
- Keep away from electronic equipment.
- Do not flip the unit when in operation, water may enter the machine and cause a malfunction.
- Keep out of reach of children and pets. Children, elderly, and people with reduced physical or sensory capabilities should use under guidance.
- If smoke or burning smell is detected, unplug immediately.

MAINTENANCE

- After using 5-6 times, or 3-5 days, please clean the product as follows:
 - •Unplug the AC-adapter from the main unit and the power socket and empty the water tank. Use a damp, clean cloth to wipe the base.
 - Do not immerse the unit in water.
 - Do not use harsh cleaners or alcohol.

Pour out the water away from the air intake as shown in the photos below.



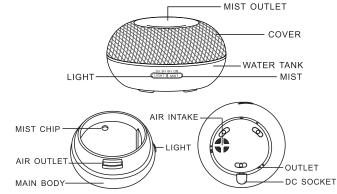

In the event the unit is knocked or tipped over,

- please follow the steps below to avoid malfunction.
- 1. Unplug the unit and remove cover.
- 2. Empty the water from tank.
- 3. Shake the unit gently to drain water.
- 4. Keep in well-ventilated area to dry.

FUNCTION NOTES

1. *This unit requires the use of 100% distilled water*


- 2. The mist intensity and amount produced will vary. It is normal and should not be considered a fault.
- 3. The unit will power off automatically when water runs out.
- 4. Use only 100% natural essential oils. If they contain
- chemical ingredients, flavors, or impurities, they may cause damage.
- 5. When the power adapter is connected, the unit will default to Off.

TROUBLESHOOTING

If product doesn't work well, please refer to the following points before requesting repairs:	
Cannot switch on	Is there enough water in the tank? Please add water to the tank. Is the power cord connected property? Please disconnect, check cables and re-connect carefully.
No mist or abnormal mist	Not enough water? or too much water? Please add suitable amount of water in the tank, water must never be filled over 300ML (MAX) line. Dirt on the ultrasonic plate? Please refer to maintenance instructions remove and re-install correctly, so vapors can be released freely. Cover and inner cover are not installed properly? Dirt on the air suction port on the underside of the base? If too much dust in the air suction port, the mist will be restricted to come out.
Water leakage from product	Cover and inner are not installed properly? Remove and reinstall correctly, so vapors can be released freely. Low temperature or high humidity? Under these conditions, the mist may condense quickly into water droplets.

(1)

 OPERATION




Keep product straighten, Connect the AC adapter to remove the upper lid and the bottom of the unit and water cap vertical direction. plug into a wall socket.

(4)

2

1H 3H 6H ON

 Please use the measuring cup to supply water (room temperature distilled water ONLY). Do not exceed the maximum line.



Install the cover to the main

on to use the product)

body. (the cover must be put

Press the 'Mist' button and select the working time (1H, 3H, 6H, or continuous). Long press 'Mist' button and wait for two beeps to turn

Press "LIGHT" to turn on the light. Adjust the light instensity. (STRONG/WEAK/OFF).

off the unit.

7

6

If you do not use it for a long time, please drain the water and dry the unit.

RESET

To reset the unit, disconnect the power adapter, wait 10 seconds, then reconnect.