

Aroma Diffuser



 
Please read the instructions/warranty terms carefully before using this product.

Content

Overview.....	2
Modes.....	5
Safety & Maintenance.....	7
How-to.....	8
Troubleshooting.....	9


Specifications

Name	Power	Voltage	Frequency
Aroma Diffuser	13W	100-240V	50-60Hz

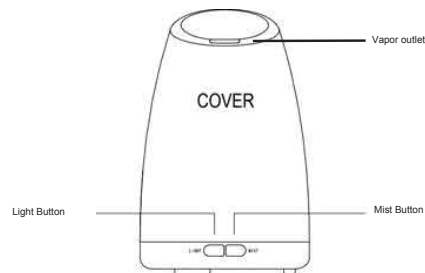

Twist to Lock & Unlock

 Overview

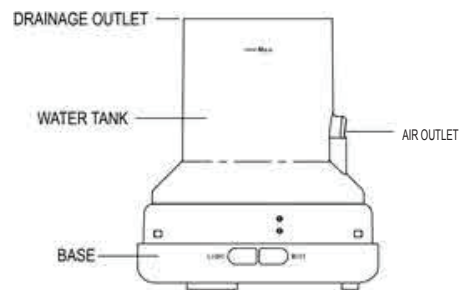


Mist

Light	Status
Green	30 Second Intervals
Red	Continuous Mode

Buttons

Button	Action/level	Instruction
Light	Press once	Color fade automatically
	Press twice	Freeze color
	Press more	Cycles through color options
Mist	Press once	Intermittent mode
	Press twice	Continuous mode
	Press 3 times	Stop

 Safety & Maintenance

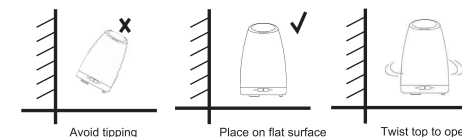

- Use in a well-ventilated room.
- Keep the product out of reach of young children.
- Regularly clean the diffuser plate carefully using a cotton swab. Avoid touching the diffuser plate with sharp objects.
- Do not pour essential oils directly into the vapor outlet. Essential oils should be added after water is added into the water tank.
- Prevent water from entering the air outlet by holding the air inlet while draining.
- Do not use water with temperatures in excess of 60°C as this may damage the diffuser.
- Do not expose the product to temperatures over 40°C or less than 0°C, strong magnetic fields, dusty environments, reactive liquids, methane, gas, or use the product on a mat/carpet surface. Doing so may risk injury.

1. Place on flat surface.
2. Twist the outer cover and remove from the diffuser base.
3. Remove the water tank cover.
4. Use the measuring cup provided and pour 100 ml of water into the tank.
5. Add 3-5 drops of 100% pure essential oil into the water.
6. Place the water tank cover back on.
7. Screw the outer cover back onto the diffuser base.
8. While keeping the diffuser leveled, plug the power adapter into the diffuser.
9. Press the Mist/Light button to turn the diffuser on.

How-to

Troubleshooting

Symtom	Solution
LED indicator is on but there is no vapor.	<ul style="list-style-type: none">• Water is low• Too much water• Dirt on the ultrasonic plate/air suction port• Cover and inner cover are not instaled properly
Only a small amount of vapor is released.	<ul style="list-style-type: none">• Covers may not be on correctly• Water tank may be overfilled
LED indicator is off.	<ul style="list-style-type: none">• Water is low• Check power cords