

AURA™ PRO

SNOWMOBILE

BLUETOOTH OPT7 PLUS APP & REMOTED CONTROLLED

INSTALLATION GUIDE


COMPONENTS




LED LIGHT STRIP 4 X 12"




LED LIGHT STRIP 2 X 24"

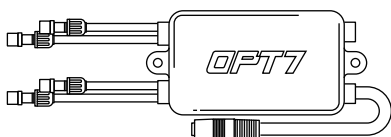

 
CONTROL BOX (SCAN QR CODE FOR APP USER GUIDE)




Y-SPLITTER X 2

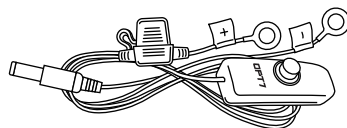

POWER HARNESS WITH ON/OFF SWITCH

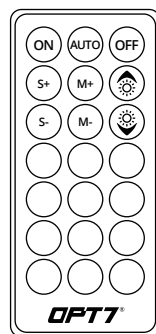

HAND HELD REMOTE

 

INCLUDES -
WIRE MOUNTS,
SELF-TAPPING SCREWS,
BOOSTER, VELCRO, ZIP TIES


MOUNTING KIT

OPT7

INSTALLATION

STEP 1

Inspect kit to ensure all contents were included.


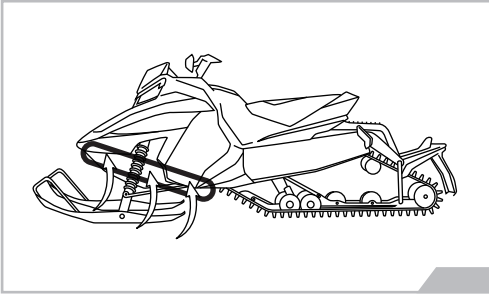


STEP 2

Determine where to locate the light strips and ensure wiring has enough length for control box to be installed in desired location.

IMPORTANT:

The control box is waterproof, but it should still be installed in a safe area of the snowmobile. Please avoid installing it on heated surface.

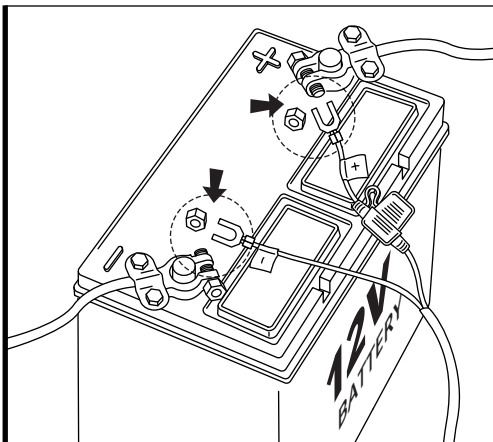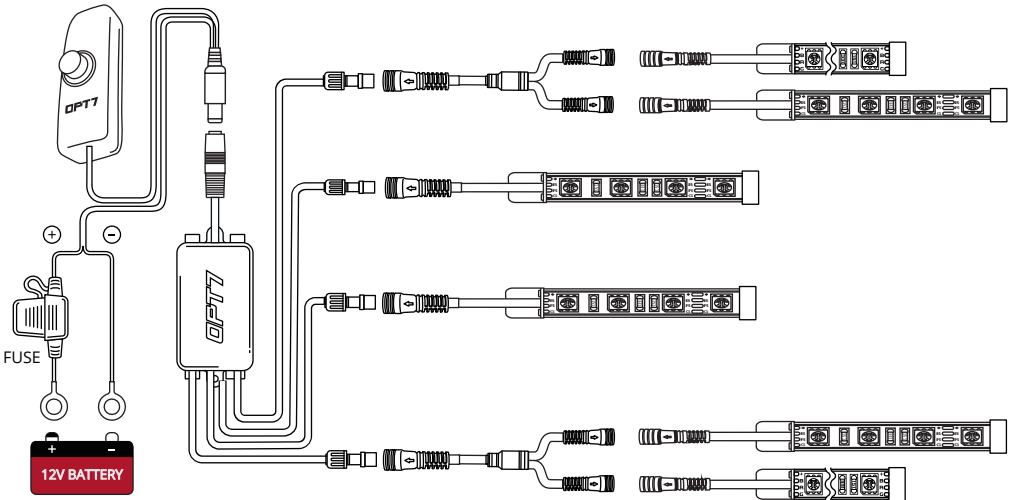

HOW TO CONNECT POWER HARNESS TO YOUR SNOWMOBILE

- Connect the Red wire (+) of power harness to the snowmobile battery's positive terminal.
- Connect the Black wire (-) of power harness to the snowmobile battery's negative terminal or an unpainted area on your snowmobile's frame.

INSTALLATION




WARNING

1. Please ensure that the LED bars or strips/control box/wiring all are mounted in areas where will not exceed 85°C or 185°F.
2. Connect only to a 12V battery. Using other voltages may cause overload and serious safety risks.

IMPORTANT


*Turning off the OPT7 PLUS completely helps avoid excessive battery consumption and extends the lifespan of the OPT7 light kits.

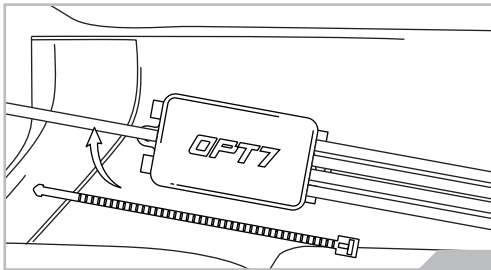

STEP 3


After testing, secure the control box in a desire location using the Velcro or zip-ties provided.

***Ensure the control box is mounted away from water and heated metal surfaces for optimal performance.**

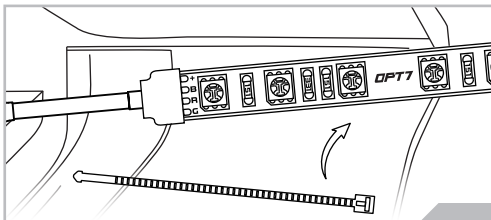

STEP 4

Secure the light strips using the zip ties to tie all the wiring away from the moving components.

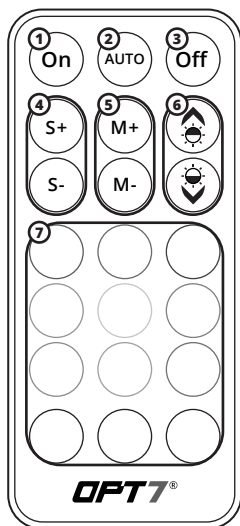


STEP 5

Using the included 21Key E-Z Remote, select your desired color or pattern.

- 1 Power-ON
- 2 Automatic Color Change
- 3 Power-OFF
- 4 Speed +/- 10 Levels
- 5 Mode +/- 24 Modes
- 6 Dimmer 10 Levels
- 7 Color Selection 12 Colors

NOTE: When you use this product, stay within 10m/33ft from the control box.

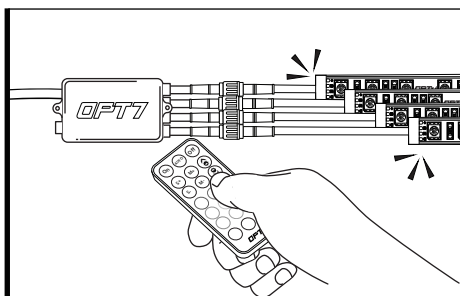


HOW TO PAIR THE REMOTE?

Pair the Device:

To pair the remote, reconnect the power, then aim the remote at the control box and hold the ON button until the LED strips flash white.

STEP 6

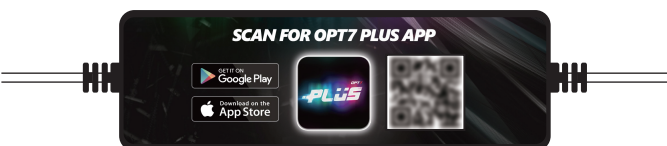

Please scan the QR code on the side of the control box and download the OPT7 PLUS App for the best experience.



Please scan to see the OPT7 PLUS user guide.
<https://support.opt-7.com/391968-OPT7-AURA-PLUS-Application-User-Guide>

| DISCLAIMER

OPT7 Lighting is not liable for damages or personal injuries while installing this product. The Installation Guide is intended as assistance to reduce setup time. OPT7 Lighting assumes no responsibility for improper installation. If you are unfamiliar with your snowmobile or inexperienced with aftermarket upgrades, please seek professional assistance.

OPT7 recommends installation for safety and guidance.
Modified installations or installation recommendations not specified by
OPT7 Lighting will void product warranty.