## **BLE Light Operating Instructions**

1、Go to"setting">"Bluetooth", and open your mobile Bluetooth



2、Click "BLE\_Light" APP icon and enter the APP interface after installing



icon or slide left/right to switch between "Home" and 3、Click

"Function" interface.



4、Turn on your BLE Light, click your APP interface "Home">"Light List">"Scan", select the scanned BLE lights, then click back to your "Light List".





i	Light List		Turn All On
	Scan	Group	
Ble_Light			

5、Connect and control the BLE lights: click the added BLE light icon,

then enter the control interface. Click icon>"connect", then you can



control the light after connection success. (Detail control interface will change according to you lights' channels.)

5.1 One-channel light can control the key light's on/off, sliding brightness bar can adjust the brightness of the light. (It will display the side light's on/off if there have one)



5.2 Two-channel light can control the key light's on/off, sliding the color temperature bar can adjust the light's color temperature, sliding the brightness bar can adjust the brightness of the light. (It will display the side light's on/off if there have one)



	Name:	Ble_Li	ght	
key light				
Color-T	White	In	Warm	
Bright				

5.3 Three-channel/Four-channel lights will have color change;

brightness/darkness; on/off (It will display the side light's on/off if there have one)

(1) White light brightness adjustment: Click icon, the light will turn white, sliding brightness bar to adjust brightness of the light.

No SIM 🗢	14:54	@ \$ 3	3% 💶
÷		Connect	• • •
		•	
			ik 4
Name	e: Ble_	_Light	
key light			
Bright		_	
			퉒쵧

(2) Brightness/color adjustment of the key light: Click icon and turn to color disk. Click the color on the disk, the light will change to the selected color. Slide the brightness bar to adjust the brightness of the light.



Name: Ble_Light
key light
Bright

(3) Adjustment of the brightness/Color according to the selected picture:

Click Click anywhere on the photo, the light became the color of the selected photos. You can also click the upper right con to change photo; Slide the brightness bar to adjust the brightness of the light.

No SIM ᅙ	14:55	@ 岩 32% 💶
Ð		Connect
	Name: Ble	e Light
key light		e_Light
Bright –		

5.4 Five-channel light can adjust the color, color temperature, brightness, and control the light switch. (It will display the side light's on/off if there have one)

(1) Adjustment of key lights' color temperature/brightness:

Click con, the light will turn white, sliding the brightness bar to adjust the brightness of the light; sliding the color temperature bar to adjust the color temperature of the light.





(2) Adjustment of key lights' color /brightness: Click icon, it will switch to the color disk. Click the color from the color disk, the light will become the selected color. Slide the brightness bar to adjust the brightness of the light

No SIM 穼	14:55	🕑 🖇 32% 💶
Ð		Connect
F	-	
	2	
	_	
	Name: Ble	_Light
key light		
Bright		
Bright -		

(3) Adjustment of color/brightness of the key light according to the selected photo: Click icon, input pictures from album or take photo. Click anywhere on the photo, the light became the color of the selected photos. You can also click the upper right icon to change photo; Slide the brightness bar to adjust the brightness of the light.



Name: Ble_Light
key light
Bright

## Warm note:

①Connection status, click on the BLE-light' name, the corresponding

light flashing, then you can change the name of the light.

②Click icon, open the induction function, your mobile phone disconnect with the light because of beyond the distance, then the light will turn off.
Back to range, the light will automatically connect and turn on.
③It will display the side light's on/off if there have one

6、Group Control: Click Group icon on "light list interface", setting up a new group and control the lights in the group.



NO SIM	· <b>~</b> 14:56	· * * :	32% L
$\bigcirc$	All lanterns		
6	hy	+	Î
	All bulbs		
	Ble_Light		
	Cancel Deter	mine	

Warm Note: APP can connect at most 4 lights. Any group combination ways to control all the lights, single control is also available.

7、Click"Home">"Scene Modes",Entering to the Scene Mode interface

and click upper right icon to select the lights which need to control,

then select the scene mode and the lights will turn to the selected mode.



8、Click "Home" > "Music", entering to Music interface and click the upper right icon to add music to the music list, then the color will

change with the music rhythm.





9, Click "Home" > "Clock", entering to the Clock interface and

click ticon to add a new clock. You can set a light play in a certain scene mode in a certain time period, or logout a certain scene mode in a certain time.

Enable clock
Begin time 14:57
End time 14:57
Repeat Mon Tue Wed Thu Fri Sat Sun
Light Select Light
Scene Modes Sunup
Save

## Warm Note:

①Click icon, you can delete the added clocks.

②Click the added clock, you can modify the clock.

3 Enable the clock and end clock time are not a must in clock setting

## interface

10、Click "Home" > "Setting", entering to Setting interface to modify connection password, or reset the password.



Warm Note:

①HY-light's original password: 000000

②Modify Password interface can only modify the connected light's password. The corresponding light will be flashing when modifying password.

- 11、Reset Password: When you forget you light's password, you can reset your password.
  - (1) Scan and add the lights which need to reset password in Light List interface.



(2) click "Home" > "setting"> "Reset Password", then there will

display the added lights and these lights haven't connected.

$\bigcirc$	Password Reset
Ŷ	Ble_Light

(3) Cut the lights' power and then power on, click the light's name in 30S and there will Pop-up reset password box. Input password and click Confirm, the system will tip password reset successful.

Ð	Passwo	ord Reset	
₩ F	Please enter	your passw	
情報	Enter the si	x digit pas	
	Cancel	Determine	