


OPT7® HONDA CIVIC SEDAN TAIL LIGHTS

2016-2019

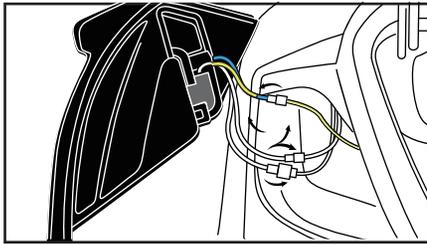

STEP 9

Reconnect all OEM tail lights harness to the new outer tail light.


* Optional-How to change the turn signal light pattern by choosing which wire is connected.

Default Mode (Sequential)

- Blue wire connected
- The turn signal lights will light up in sequential mode


Blinking Mode

- Disconnect the blue turn signal wire
- Connect the yellow turn signal wire instead

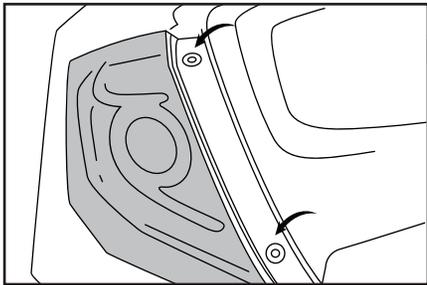

STEP 10

- Line up the mounting tabs and push rearward to seat in place.
- Next, re-install the bolts (2X) that were previously removed.
- Repeat the same steps for the other tail light.

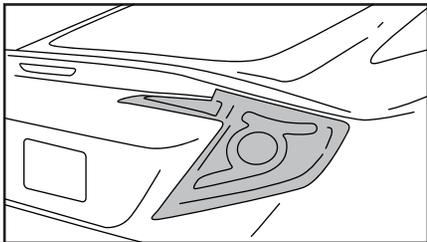


STEP 11

- Close the trunk and check that all of the lights are working properly.
- Now, let's enjoy the new tail lights.

DISCLAIMER

OPT7 Lighting is not liable for damages or personal injuries while installing this product. The Installation Guide is intended as assistance to reduce setup time. OPT7 Lighting assumes no responsibility for improper installation. If you are unfamiliar with your vehicle or inexperienced with aftermarket upgrades, please seek professional assistance.

WHAT'S INCLUDED

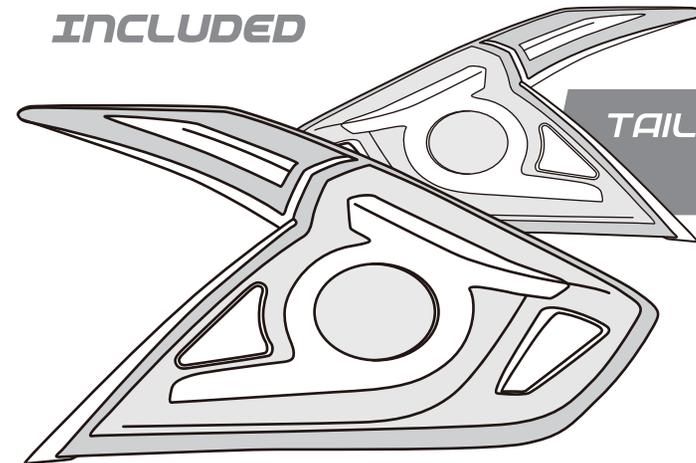

TAIL LIGHTS
X2


TOOLS NEEDED



10mm Socket



Philip Screwdrivers




10mm Socket Wrench




Flathead Screwdrivers

INSTALLATION

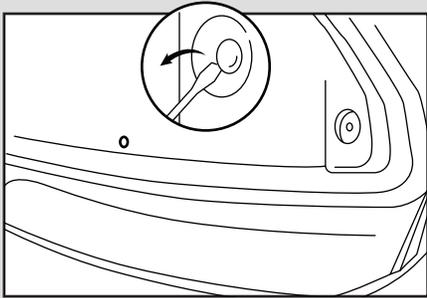


STEP 1

- First pop open the vehicle's trunk.
- Then, use a FLAT-HEAD screwdriver to remove all of plastic fasteners (9X) from the inner lining.
- Peel off the inner lining.

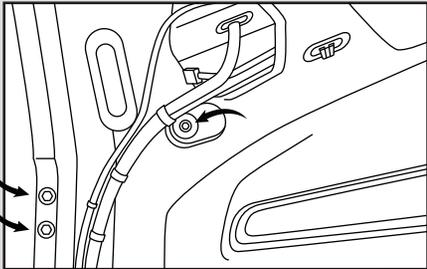


STEP 2

Next, remove the 10mm bolts (2X) on the sides and the nut bolt (1X) with a HEX- SOCKET wrench.

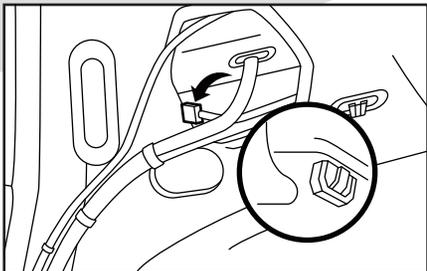


STEP 3

- Locate the white clip that is securing the wiring harness and release it.
- Next, unplug the connection from the OEM tail light.

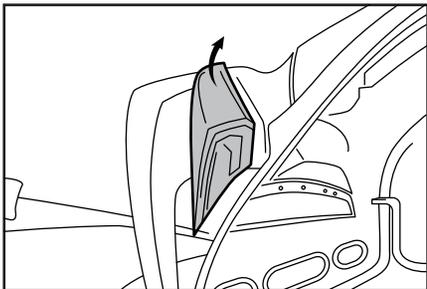


STEP 4

Pull the inner tail light outward to pop out the OEM tail lights from the frame of the vehicle.

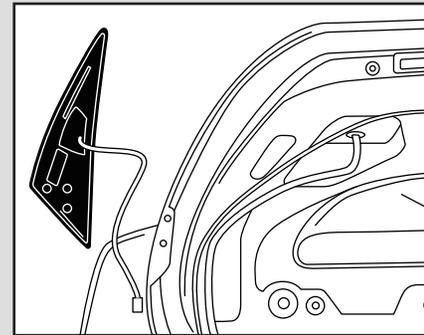


STEP 5

- Grabbing the new inner tail light and put it back on the seat and reconnect the wiring harness.
- Then re-install the bolts(2X)/nut (1X) that were removed.
- Repeat the same steps for the other side.

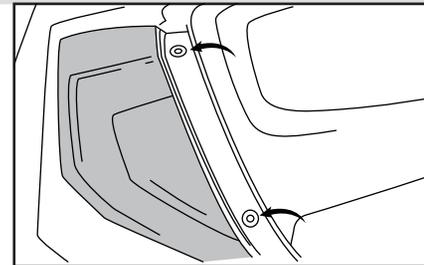


STEP 6

Remove the 8mm mounting bolts (2X) with a bolt screwdriver.

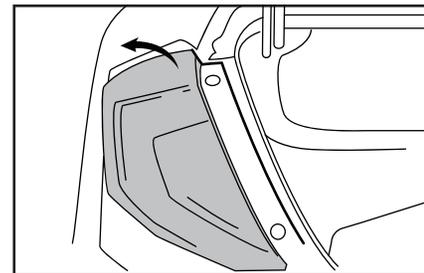

STEP 7

Carefully, pull out the outer tail light, so that it is able to pop out of the fixed chassis.

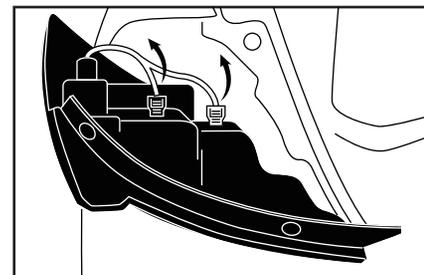

STEP 8

Disconnect all OEM tail light harness.