


# TRUCK TOW MIRROR

FOR CHEVROLET SILVERADO  
/TAHOE & GMC SIERRA/YUKON

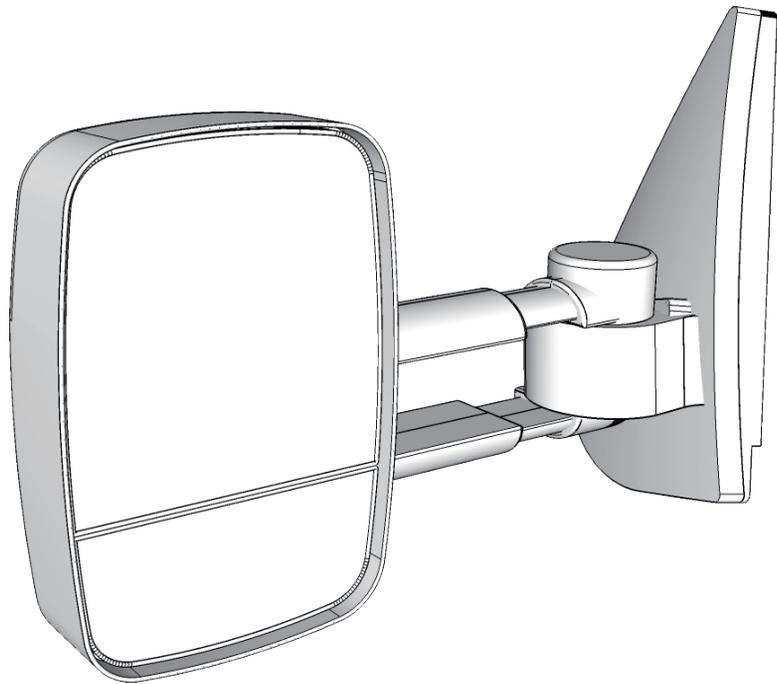


QUICK-INSTALL GUIDE

## STEP 1 REMOVE THE ORIGINAL MIRROR

First, remove the door panel. (If you do not know how to do this for your vehicle, there are various online tutorials that can help you.) Unplug the wired connector and unscrew the three nuts holding the mirror in place. Pull your original mirror out – if there are pins that hold the mirror in place, you will need to pop them out as you slide the mirror outwards.

## STEP 2 INSTALL YOUR OPT7 MIRROR

Screw your new OPT7 mirror into place and reconnect the wiring plug. Test the heating functions using your vehicle's controls.\* Replace your door panel, and repeat the process for the mirror on the other side.

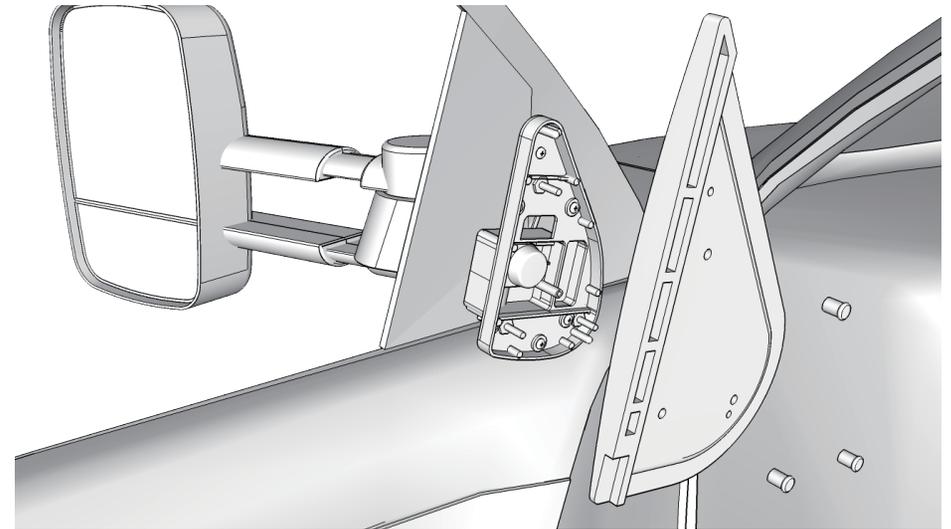

\*Power-adjustable heating function will work ONLY if your vehicle enabled this function with your original mirror.



**HAVING TROUBLE?**

Our technicians are happy to help.  
Simply shoot us an email at [support@opt-7.com](mailto:support@opt-7.com)!