

AURA™

HALO ACCENT LIGHTS


DODGE CHALLENGER 08-23

INSTALLATION GUIDE


COMPONENTS




LIGHT STRIP X4

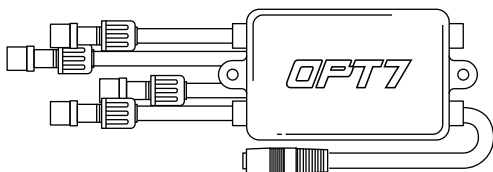


CONTROL BOX

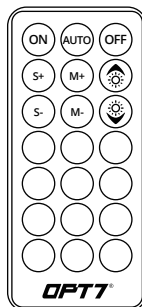

REMOTE

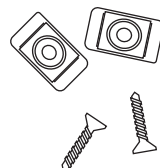

MOUNTING KIT

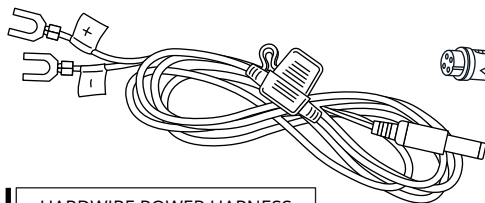


HARDWIRE POWER HARNESS



EXTENSION WIRE X4


INSTALLATION

STEP 1

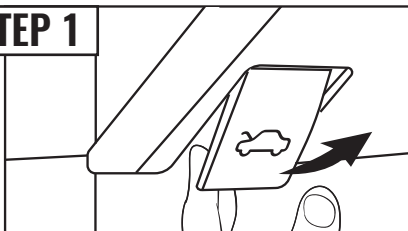


Open the hood.

STEP 2

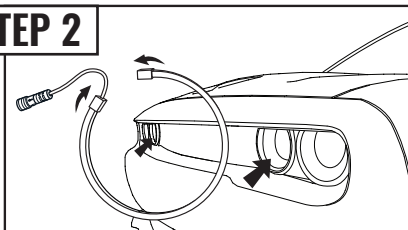


Wrap the LED strip into a circle shape and firmly press into place inside of the intake hole to secure.

AND/OR

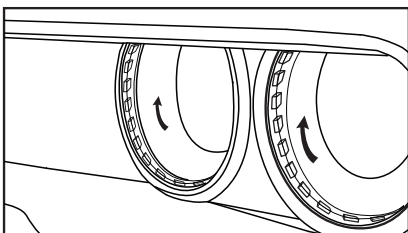


Attach the strip as pictured as an alternate method of install.

STEP 3

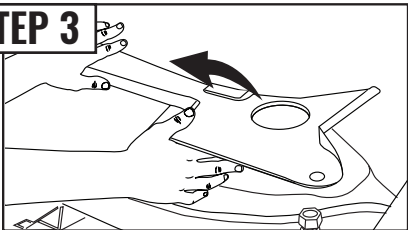


Remove the plastic covers on the right and left side of the engine bay.

STEP 4

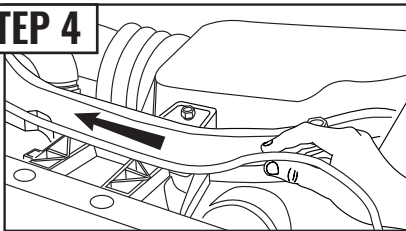

Run the wires along the front bracket and connect to the control box.

STEP 5

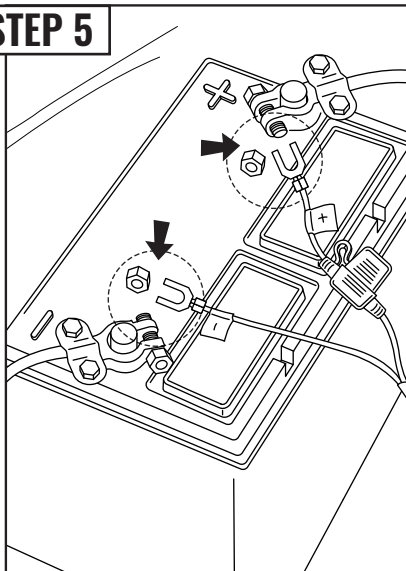


Connect the power wire harness to your vehicle's battery, making sure to route the wires properly, so the harness can reach the control box.

Note: On some Dodge Challengers, the battery is located in the rear of the vehicle. Please verify its location before installation.


INSTALLATION

OPTION #2

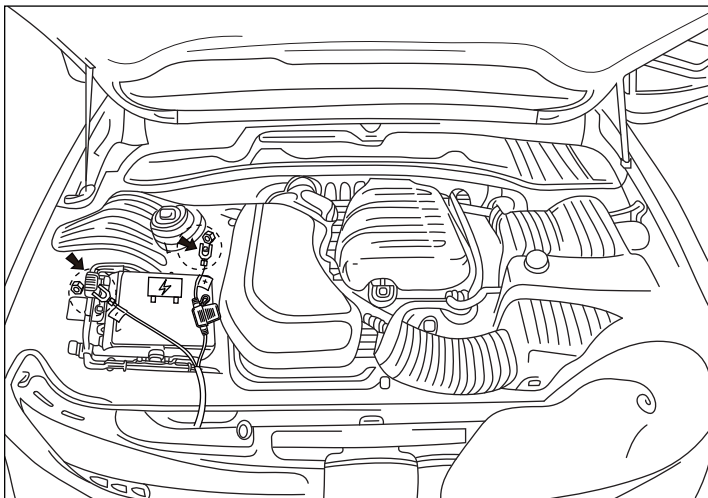

If your battery is located in the front engine compartment, you may install the power harness there as an alternative installation method.


STEP 6

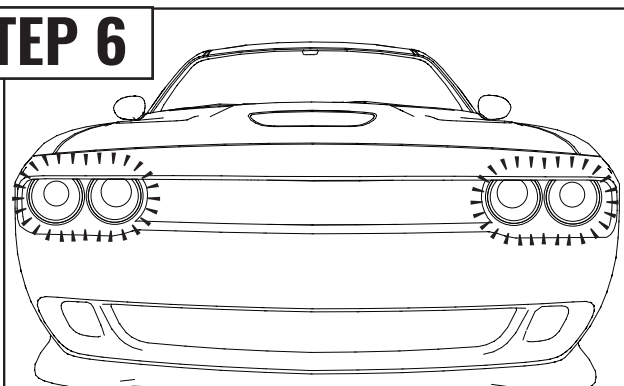

Test for function.


INSTALLATION

EXAMPLE

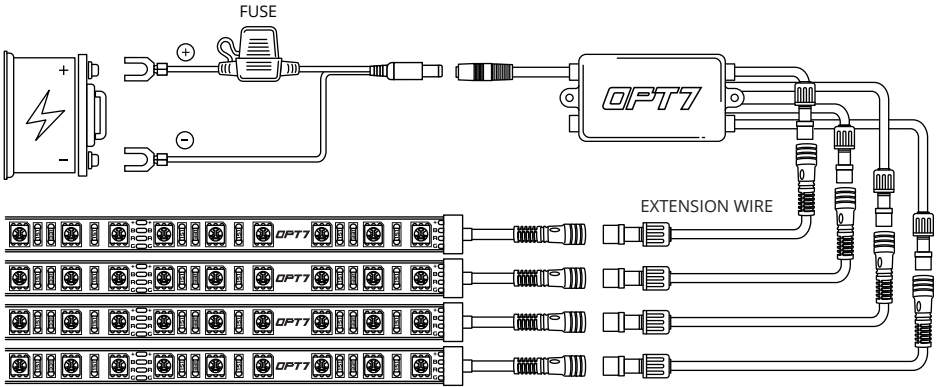

1. Connecting to more than 10 AMP will override the kit and cause early failure, ensure it is 10 AMP or less!!
2. Please ensure that the LED bars or strips/control box/wiring all are mounted in areas where will not exceed 85°C or 185°F.

WARNING!

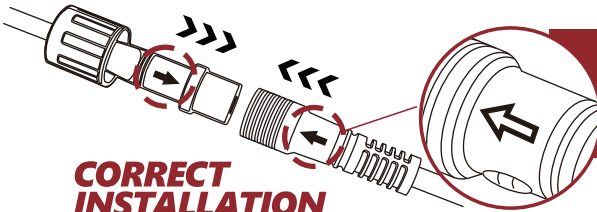


Note the direction of the arrows

CORRECT INSTALLATION

**PRODUCT WARRANTY WILL BE VOID
FOR IMPROPER INSTALL.**

OPT7[®]

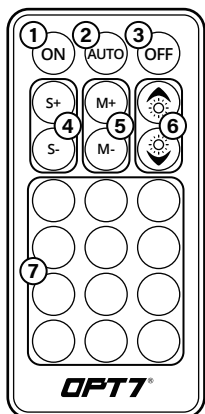


BUTTON LAYOUT

STEP 7

Using the included E-Z Remote, select your desired color or pattern.

- 1 Power-ON
- 2 Automatic Color Change
- 3 Power-OFF
- 4 Speed +/- 10 Levels
- 5 Mode +/- 24 Modes
- 6 Dimmer 10 Levels
- 7 Color Selection 12 Colors

NOTE: When you use this product, stay within 10m/33ft from the control box.

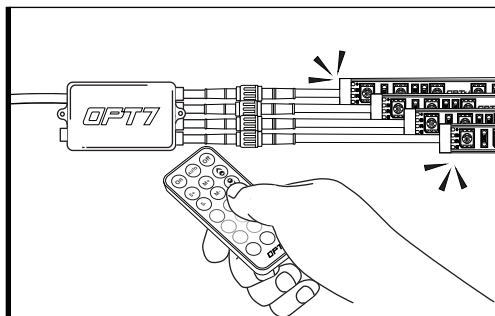

HOW TO PAIR THE REMOTE?

Pair the Device:

To pair the remote, reconnect the power, then aim the remote at the control box and hold the ON button until the LED strips flash white.

Unpair the Device:

To unpair the remote, reconnect the power, then aim the remote at the control box and hold the OFF button until the LED strips flash white.

DISCLAIMER

OPT7 Lighting is not liable for damages or personal injuries while installing this product. The Installation Guide is intended as assistance to reduce setup time. OPT7 Lighting assumes no responsibility for improper installation.

If you are unfamiliar with your vehicle or inexperienced with aftermarket upgrades, please seek professional assistance.

OPT7 recommends installation for safety and guidance.

Modified installations or installation recommendations not specified by OPT7 Lighting will void product warranty.