
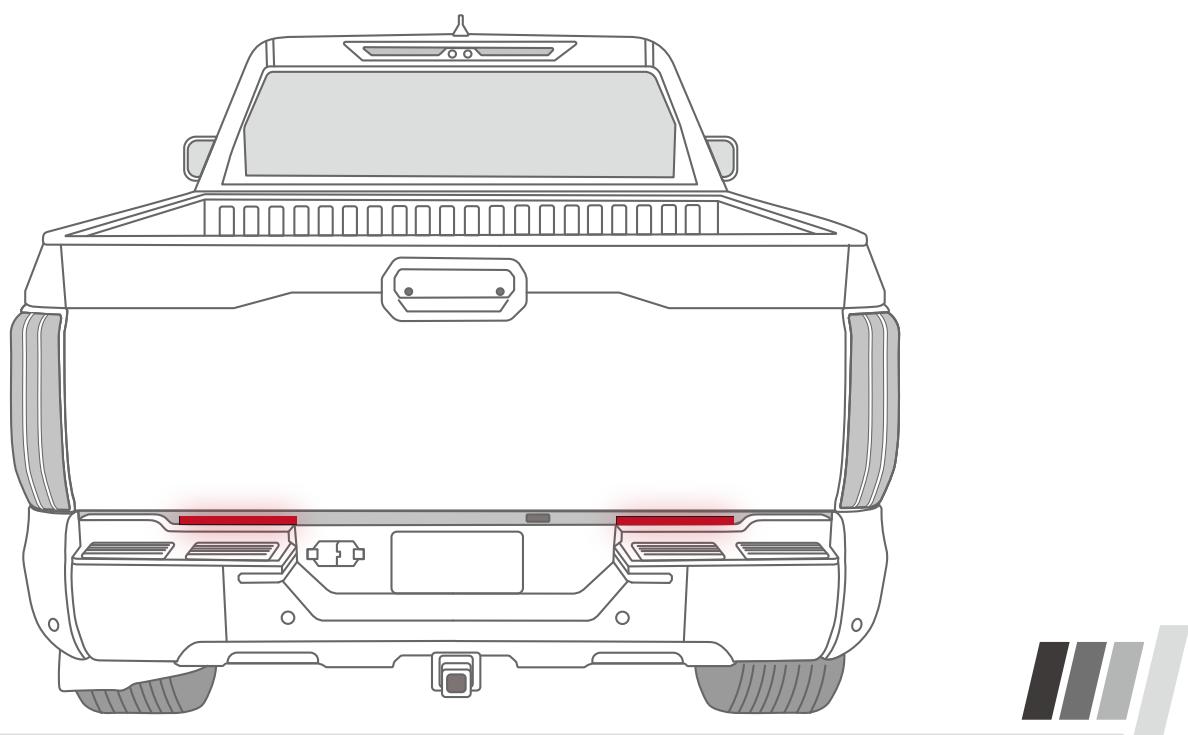




OPT7®

TAIL LIGHT BAR FOR TRUCK

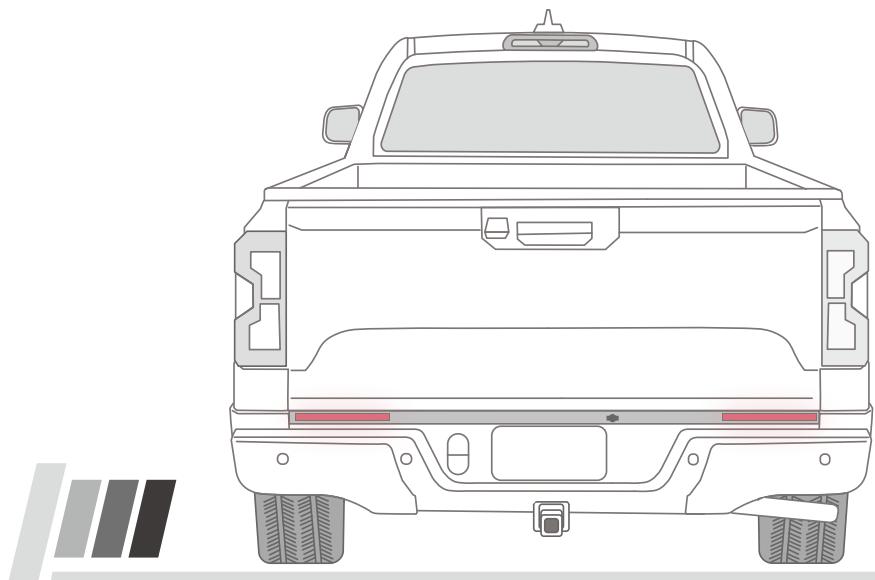


INSTALLATION


WHAT's INCLUDING

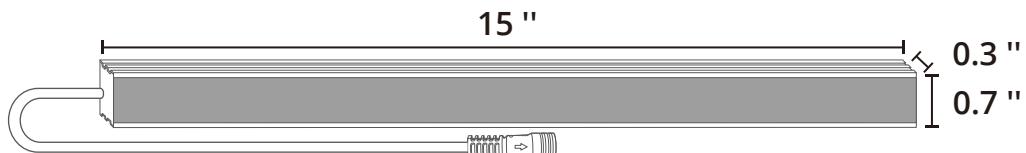


Trailer Light Bar

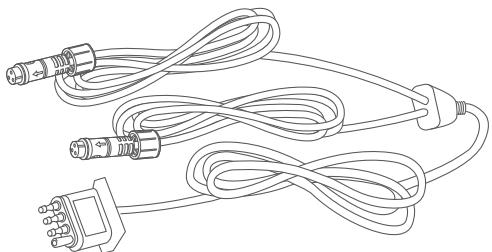

6.6 FT Power Harness

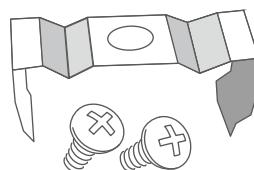


Mounting Clips

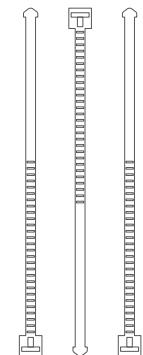

Zip Ties

Recommendation for methods and location

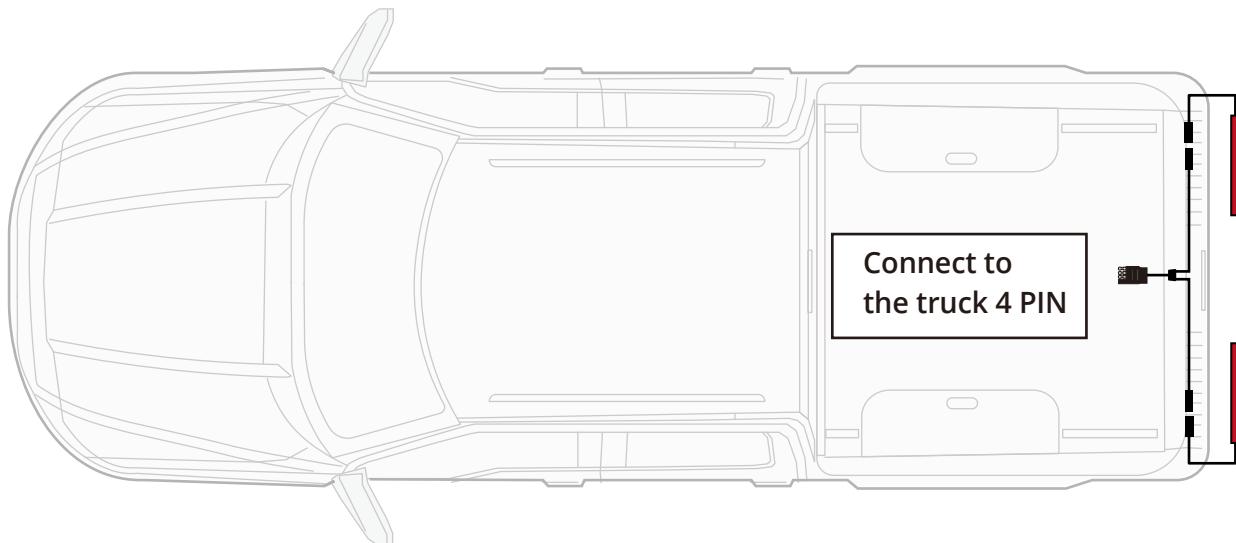


STEP1

Refer to the wiring diagram. We recommend mounting the light bar under the tailgate or on the rear bumper.

*Avoid blocking the spare tire access hole, if your vehicle is equipped with one.


INSTALLATION

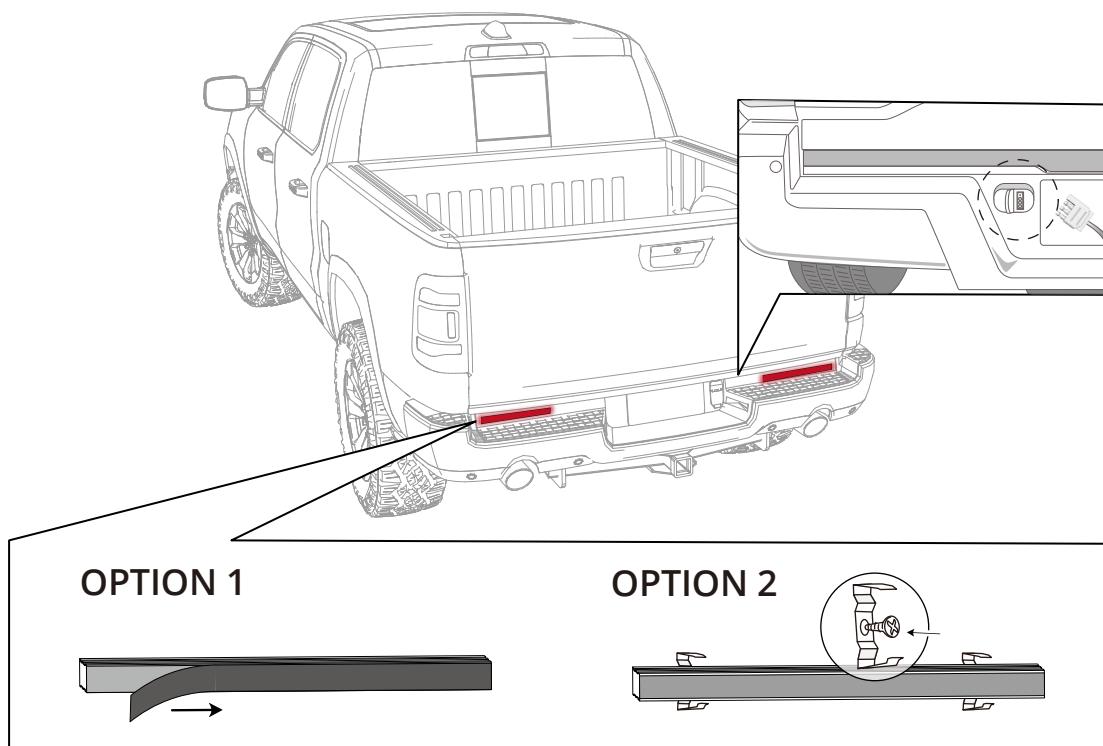

STEP2

Peel off the backing of the adhesive tape on the light bar to stick it directly to the truck, or use the included mounting clips to secure it in place. Then, connect the light bar to the power wires and plug the 4 Pin connector into the truck.

WARNING!

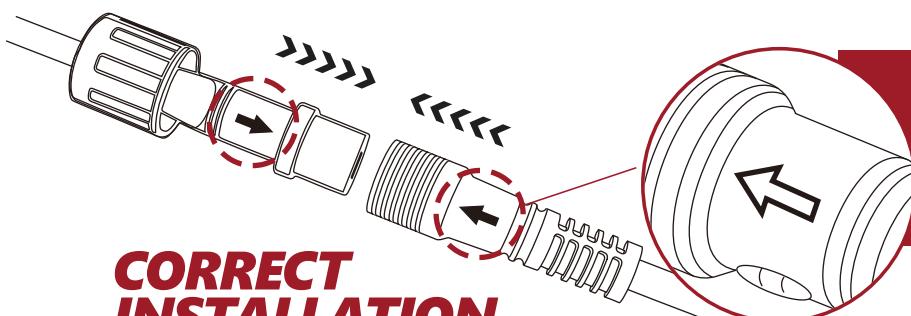


Note the direction of the arrows

**CORRECT
INSTALLATION**

**PRODUCT WARRANTY WILL BE VOID
FOR IMPROPER INSTALL.**

INSTALLATION

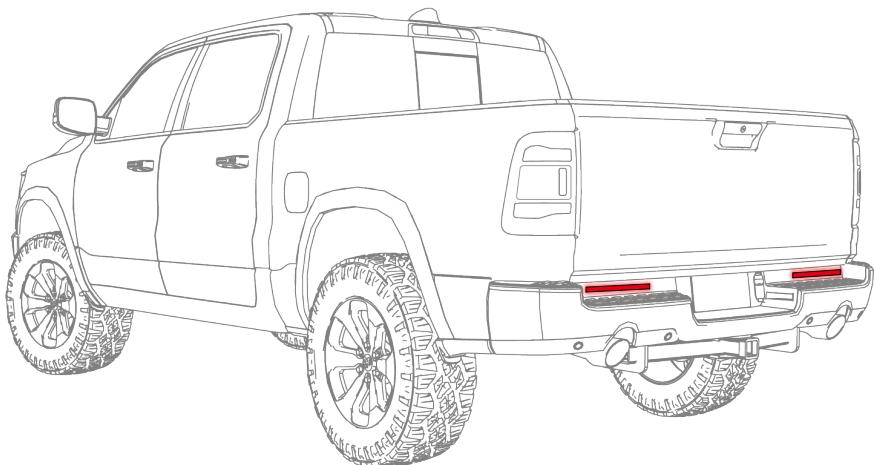

STEP3

After installation, start the engine and check that all functions are working properly.

DISCLAIMER

OPT7 Lighting is not liable for damages or personal injuries while installing this product. The Installation Guide is intended as assistance to reduce setup time. OPT7 Lighting assumes no responsibility for improper installation. If you are unfamiliar with your vehicle or inexperienced with aftermarket upgrades, please seek professional assistance.

OPT7 recommends installation for safety and guidance.

Modified installations or installation recommendations not specified by OPT7 Lighting will void product warranty.

30

DAYS

WARRANTY