



**OPT7<sup>®</sup>**

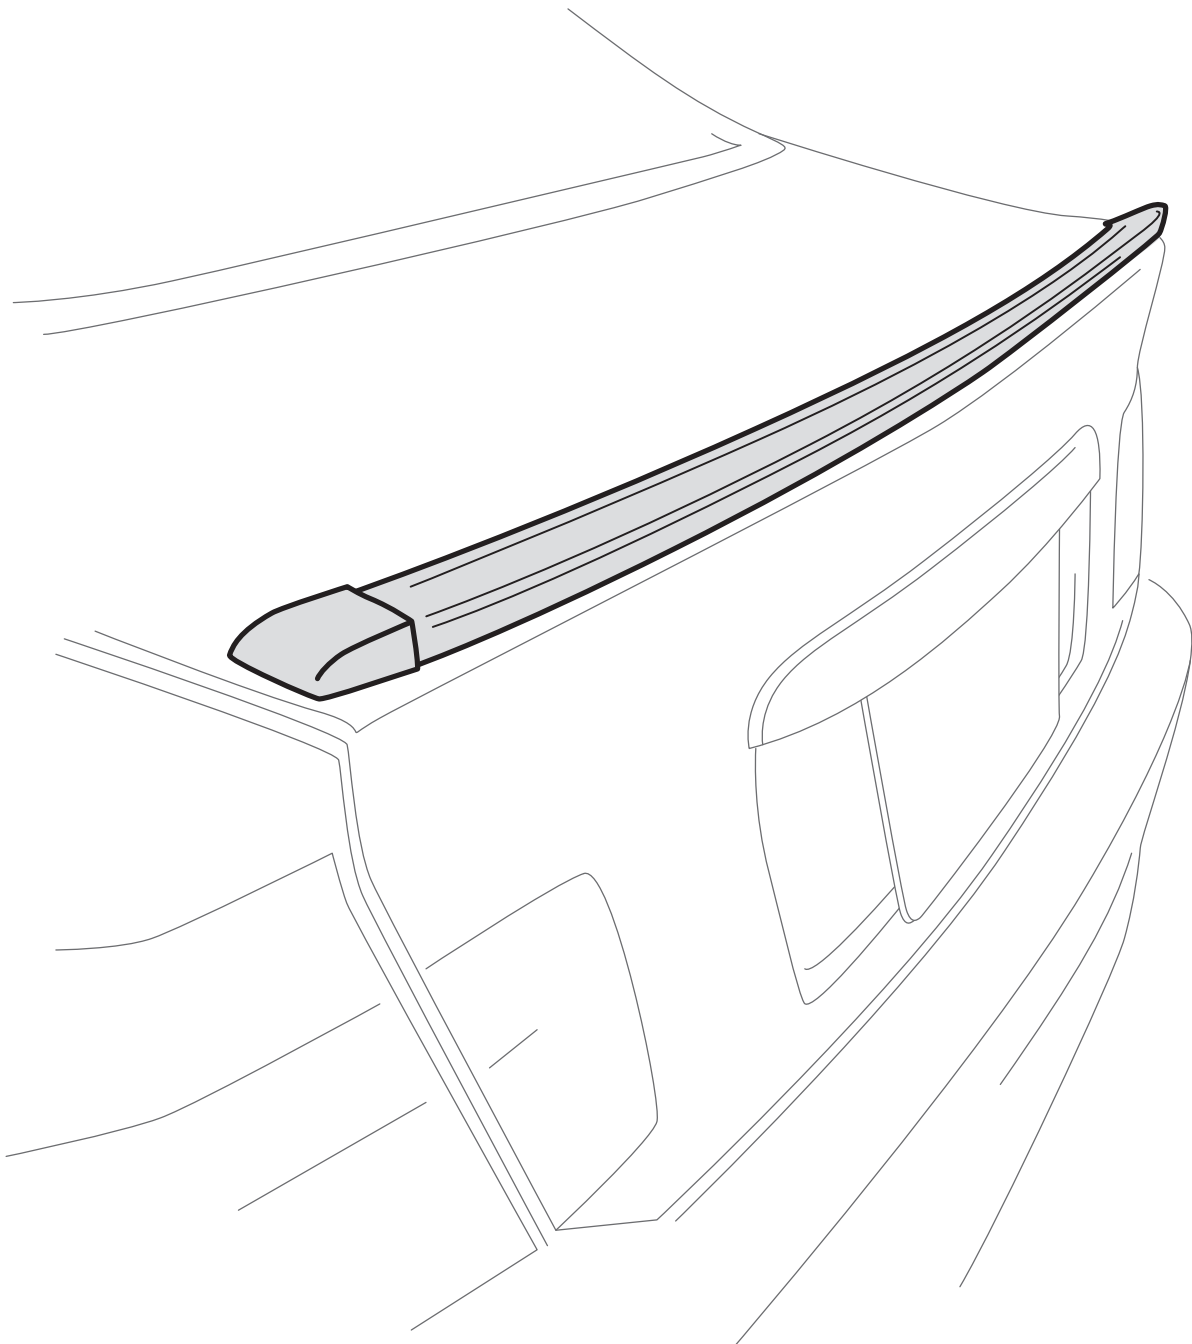


# ***LED SPOILER***

**INSTALLATION MANUAL**


# WHAT'S ***INCLUDED***

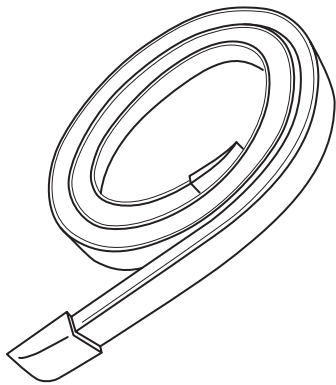

**LED STRIP x1**

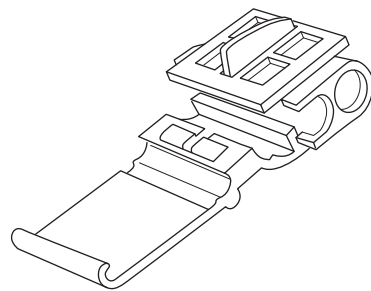

**SCOTCHLOKS x2**

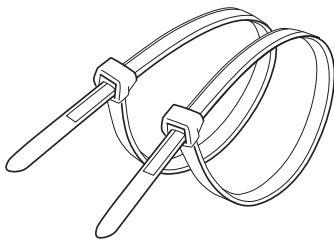

**ZIP-TIES 8 INCH x4**



**ADHESIVE BOOSTER x1**

OPT7 recommends installation for safety and guidance.  
Modified installations or installation recommendations not specified  
by OPT7 Lighting will void product warranty.


# INSTALLATION ***STEPS***

## **STEP 1**

Open your package, and verify that you have received all items (see section titled **PACKAGE INCLUDES**).

### **OPTIONAL**

Test your strip first by following STEP 6 before mounting.

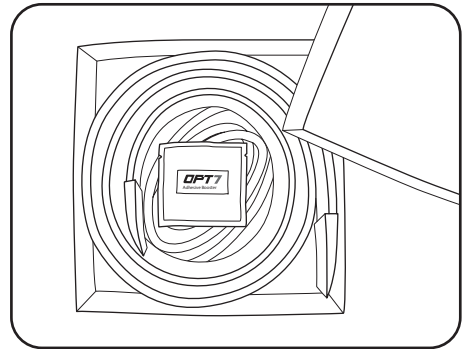


## **STEP 2**

Measure the length of your trunk.  
Trim the spoiler to size.

### **PLEASE NOTE**

Once you have trim the LED Spoiler to size, remove the sheath from the end of the light strip when you are done. Next, apply or inject some hot-melt glue inside the sheath and re-insert it into the cut off area for better protection.

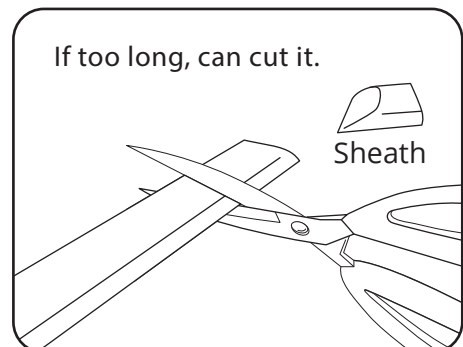


## **STEP 3**

Thoroughly clean the surface where you plan on mounting the LED strip. (A dirty surface will prevent the strip from attaching firmly.)


### **NOTE**

Please use isopropyl alcohol (Rubbing alcohol) to prep the surface area clean. This is essential to ensure a strong contact area.

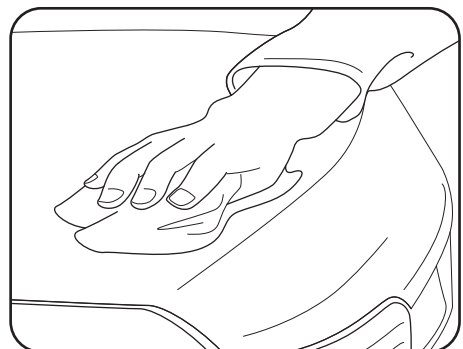


## STEP 4

Wipe the mounting area with the included adhesive booster.

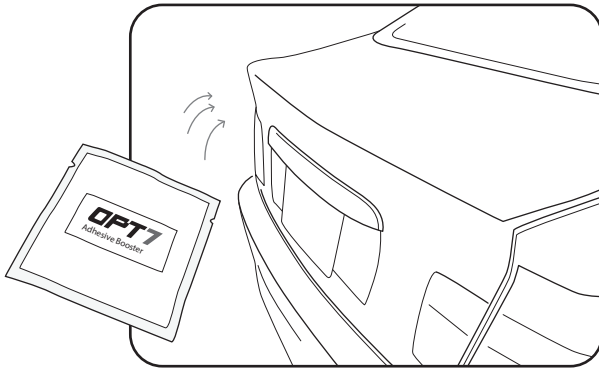

## STEP 5

Firmly press the LED strip to the mounting area, and hold for 3 seconds.

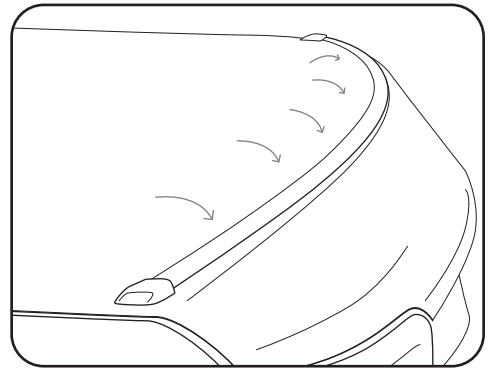

## STEP 6

To power the LED strip, find your vehicle's corresponding wiring »

### OPTIONAL

Use included Scotchlocks to crimp the wires.

### NOTE

Additional wiring may be needed for longer vehicles.

### RECOMMENDED INSTALLATION

For your best installation option, we strongly recommend that you connect the power to the parking light.

### NOTE

If you want to turn the lights on during daytime use, simply turn on the parking light switch in your vehicle, and that should do it.

**RED**

» 12V+ Brake wire

**BLACK**

» Ground Wire

## STEP 7

Use included zip-ties to tuck away excess wiring.

### NOTE

If you don't want your trunk lid to be seen sticking out of excess wiring, we would recommend that you drill a hole to get the wire from the spoiler before installing it.

