

AURA™

TRUCK BED STRIP

INSTALLATION GUIDE


MAIN COMPONENTS



LIGHT STRIPS




AURA CONTROL BOX




ZIPTIES




MOUNTING KIT

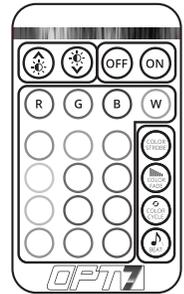


HAND HELD REMOTE

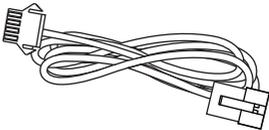

EXTENSION WIRES

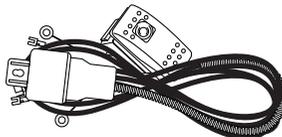


POWER HARNESS W/ SWITCH

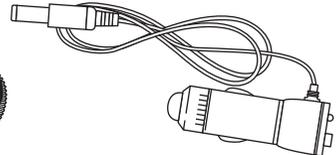

CIGARETTE POWER ADAPTER

OE-STYLE SWITCH SETUP

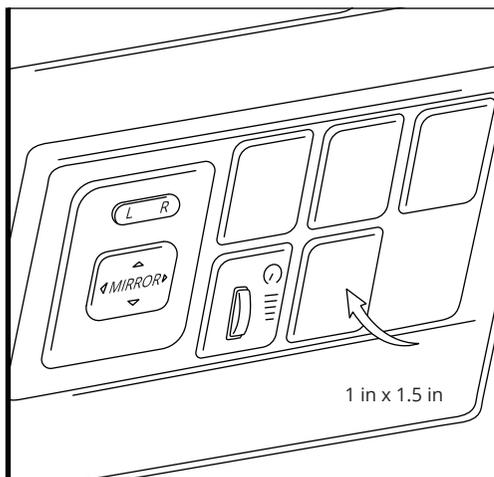


STEP 1

To install the switch, your vehicle will need an open 1 in x 1.5 in slot on the dashboard.


STEP 2

Run the rocker switch chosen slot, then connect the control box.

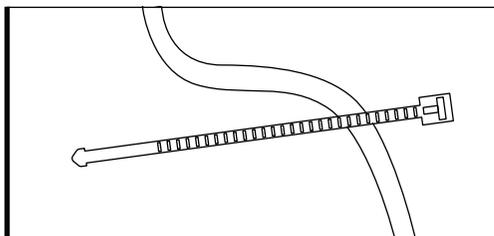

STEP 3

Use the included zip ties to tie-up any loose wiring.

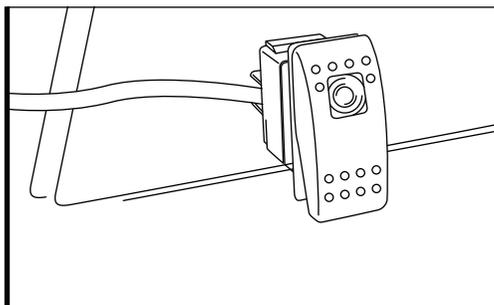


STEP 4

Use the switch to turn "ON" the kit using the OE-style switch.

PRESSURE SWITCH SETUP


Automatic ON feature when tailgate is opened

****NOTE: This feature activates white-colored light only, the app will NOT function when this is in use.**

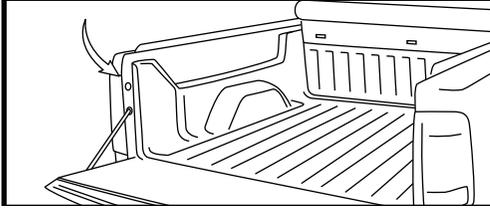

| STEP 1

Drill a small 3/10" hole in your tailgate bracket.

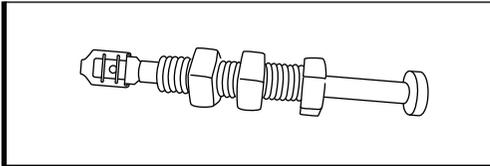

| STEP 2

Insert the tailgate pin switch (sold separately) into tailgate bracket.

| STEP 3

Feed the wiring from the control box through the underbody, and connect to the tailgate pin switch.

| STEP 4

Use the included zip ties to wrap up any loose wiring.

| AUX WIRING FOR A DOME/DOOR LIGHT

NOTE: This feature activates white light only.

In order to activate Door Assist Sync, you need to connect the aux wiring of Aura control box to the positive and negative wiring of dome or door light.

INSTALLATION

STEP 1

Prepare the mounting area by removing all dirt and foreign debris and applying the included Adhesive Booster.


STEP 2

Decide where to locate the light strips and ensure wiring has enough length for control box to be installed in desired location.


*** CONTROL BOX NOT WATERPROOF**

Ensure the control box is safely and securely hidden from exposing elements of moisture.


As shown below, connect all light pods to the control box with the included extension cables.

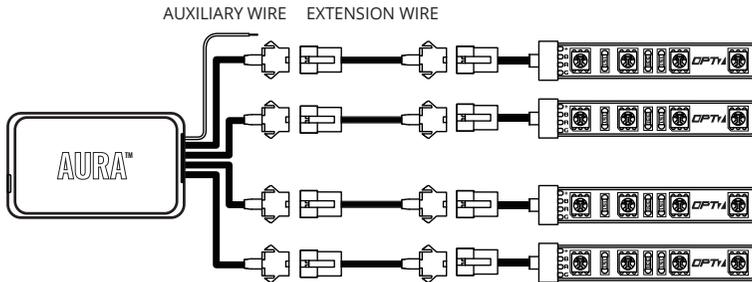


Once connected, plug the control box Cigarette Power Adapter into an available 12 volt charging port.

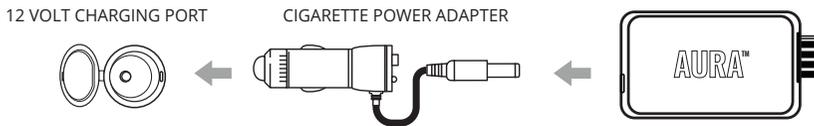

or, connect the positive wire to the fuse tap and connector the open negative wire to a ground (any metal surface). Then plug the fuse tap into the 10amp switched fuse.

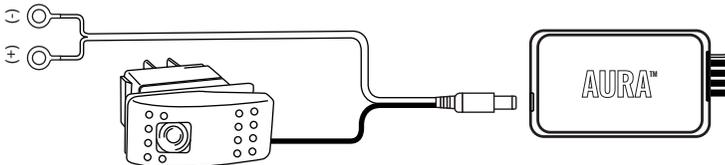


INSTALLATION

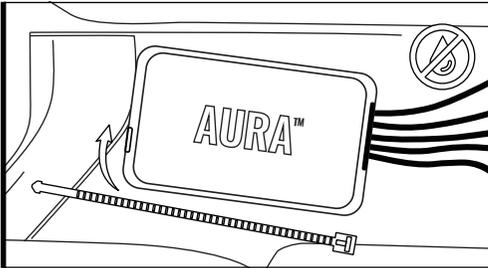

STEP 3

Secure Control box in desired location with Velcro or zipties.

*** CONTROL BOX NOT WATERPROOF**
Ensure the control box is safely and securely hidden from exposing elements of moisture.

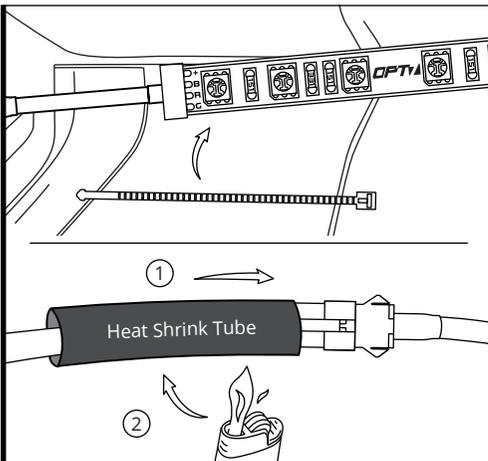


STEP 4

Secure the light strips using the zip ties to tie all the wiring away from the moving components.

*** IMPORTANT:**
The LED connectors are not waterproof. You will need to use **HEAT SHRINK TUBE** (not included) or **ELECTRICAL TAPE** around the LED connectors to ensure the longevity of the lighting kit.

STEP 5

Using the included E-Z Remote, select your desired color or pattern.

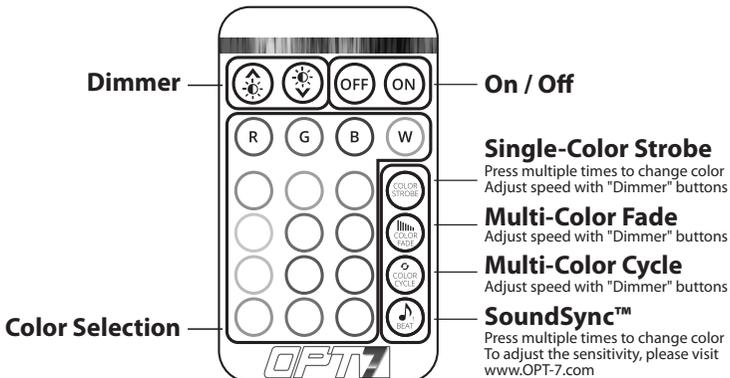


| AUX WIRING FOR A DOOR/DOME LIGHT



Please scan to see a detail instruction on Door Assist Sync or go to <https://wintis.ladesk.com/549690-AURA-Door-AssistAUX-Installation-Guide>

| OPTIONAL UPGRADE

Upgrade your Aura Original Control Box to the Aura Pro Bluetooth Control Box. All new AURA Pro Bluetooth is App enabled by a smartphone controller (iOS & Android Compatible).

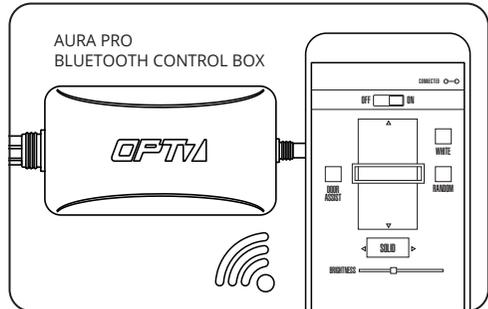

| DISCLAIMER

OPT7 Lighting is not liable for damages or personal injuries while installing this product. The Installation Guide is intended as assistance to reduce setup time. OPT7 Lighting assumes no responsibility for improper installation. If you are unfamiliar with your vehicle or inexperienced with aftermarket upgrades, please seek professional assistance.

OPT7 recommends installation for safety and guidance.

Modified installations or installation recommendations not specified by OPT7 Lighting will void product warranty.