AURA™
GLOW
DREAMCOLOR UNDERGLOW
FLEXIBLE / 4PC
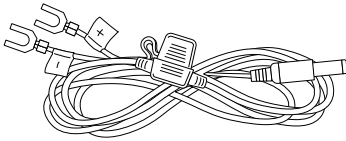### INSTALLATION GUIDE

MAIN COMPONENTS

AURA DREAMCOLOR

FLEXIBLE LIGHT STRIPS 36"×2 + 48"×2

CONTROL BOX (SCAN QR CODE FOR APP USER GUIDE)

HARDWIRE POWER HARNESS
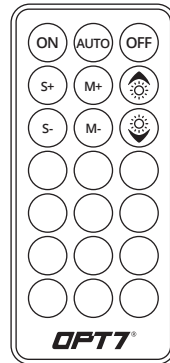
ON	AUTO	OFF
S+	M+	☀
S-	M-	☀

OPT7®

ADHESIVE BOOSTER

INCLUDES -
WIRE MOUNTS, SELF-TAPPING
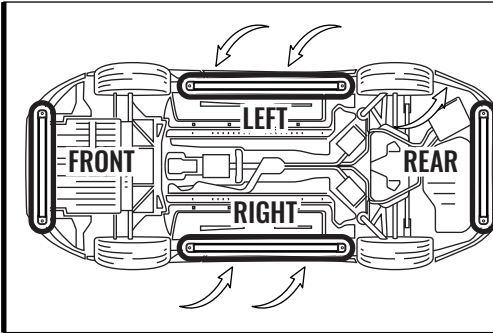SCREWS, BOOSTER, VELCRO, ZIP TIES

MOUNTING KIT

HAND HELD REMOTE

OPT7®

INSTALLATION

STEP 1

Inspect the kit has all the contents included and power the unit to test the lights function properly with the 12 volt adapter provided.
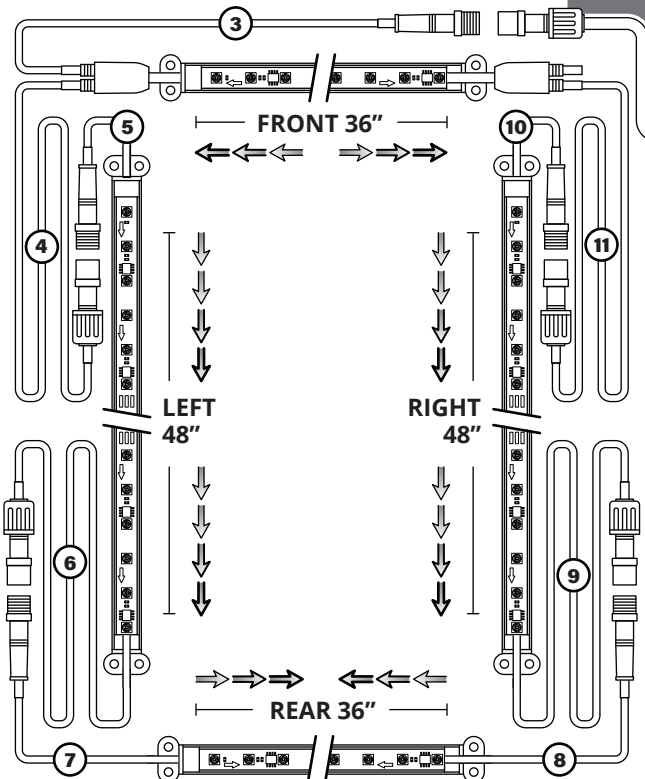

LEFT

FRONT

REAR

RIGHT

STEP 2

Decide where to locate the control box and ensure wiring has enough length for light strips to be installed in desired location.
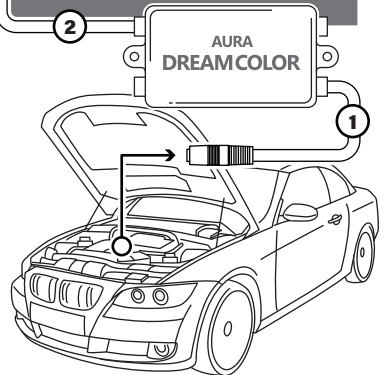
IMPORTANT
Avoid installation areas of the engine bay + heated surfaces.

As shown below, connect all the LED strips to the control box.

NOTE
Make sure that the arrow marks are set according to the flow direction on the diagram.

FRONT 36"

LEFT 48"

RIGHT 48"

REAR 36"

AURA
DREAMCOLOR

|	
1	L=5.9 inch w / DC 12V connector
2	L=4.7 inch w / 3P-Female connector
3	L=118.1 inch w / 3P-Male connector
4	L=98.4 inch w / 3P-Female connector
5	L=11.8 inch w / 3P-Male connector
6	L=98.4 inch w / 3P-Female connector
7	L=11.8 inch w / 3P-Male connector
8	L=11.8 inch w / 3P-Male connector
9	L=98.4 inch w / 3P-Female connector
10	L=11.8 inch w / 3P-Male connector
11	L=98.4 inch w / 3P-Female connector

OPT7®

INSTALLATION
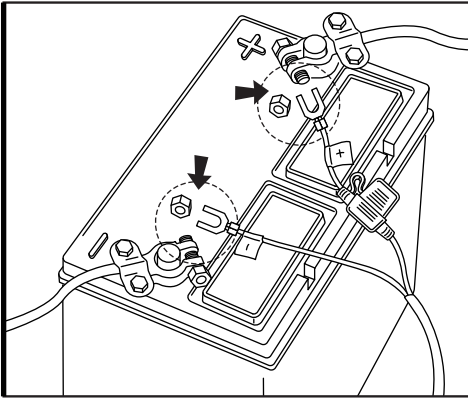
HOW TO CONNECT POWER HARNESS TO YOUR VEHICLE

- Connect the Red wire (+) of power harness to the vehicle battery's positive terminal.
- Connect the Black wire (-) of power harness to the vehicle battery's negative terminal or an unpainted area on your vehicle's frame.
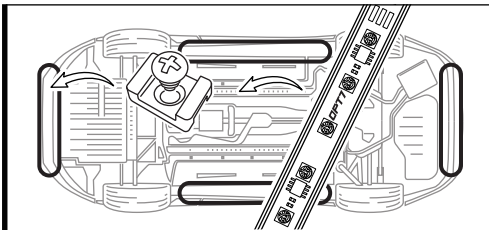
⚠️ **WARNING**

1. **Connecting to more than 10 AMP will override the kit and cause early failure, ensure it is 10 AMP or less!!**
2. **Please ensure that the LED bars or strips/control box/wiring all are mounted in areas where will not exceed 85℃ or 185°F.**
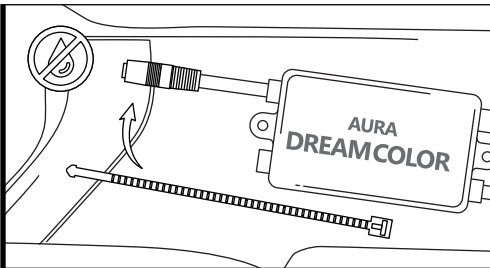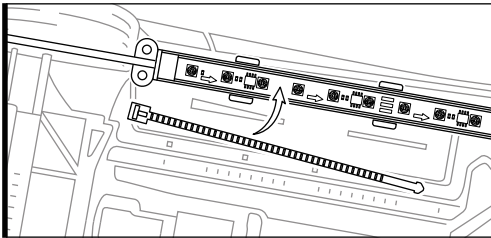

STEP 3

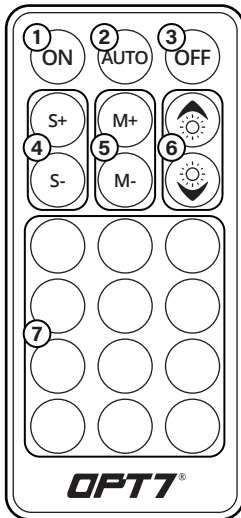Secure Control box in desired location with Velcro or zipties.

STEP 4

Mount brackets to secure the strip first.

OPT7®

INSTALLATION

STEP 5

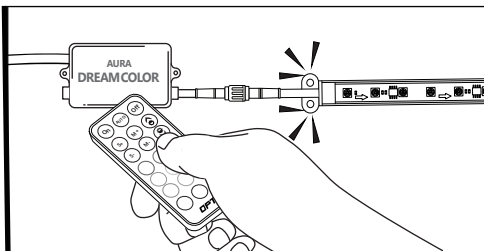Secure the light bars using the zip ties to tie all the wiring away from the moving components.

STEP 6

Using the included E-Z Remote, select your desired color or pattern.

1	Power-ON
2	Automatic Color Change
3	Power-OFF
4	Speed +/- **10Levels**
5	Mode +/- **20 Mode**
6	Dimmer **10 Levels**
7	Color Selection **12 Colors**

NOTE: When you use this product, keep it within 10m/33ft as much as possible.

HOW TO PAIR THE REMOTE?

Pair the Device:
To pair the remote, reconnect the power, then aim the remote at the control box and hold the ON button until the LED strips flash white.

Unpair the Device:
To unpair the remote, reconnect the power, then aim the remote at the control box and hold the OFF button until the LED strips flash white.

OPT7

QR CODE TO DOWNLOAD

GET IT ON **Google Play**

Download on the **App Store**

SCAN FOR APP
OPT7®
GLOW

Download the free "OPT7 GLOW" App
• App iOS (12+) available on App Store
• Android (8+) available on Google Play

Download the OPT7 GLOW
to have the best experience.

Please scan to see the OPT7 GLOW user guide.
https://wintis.ladesk.com/362302-OPT7-AURA-Glow-Application-User-Guide

DISCLAIMER

OPT7 Lighting is not liable for damages or personal injuries while installing this product. The Installation Guide is intended as assistance to reduce setup time. OPT7 Lighting assumes no responsibility for improper installation.
If you are unfamiliar with your vehicle or inexperienced with aftermarket upgrades, please seek professional assistance.

OPT7 recommends installation for safety and guidance.

Modified installations or installation recommendations not specified by OPT7 Lighting will void product warranty.

OPT7®